

SCADAPack E

5506 Analog Input Module Hardware Manual

Version: 8.14.3

Date: August 2017



Table of Contents

1	Legal Information	4
2	Technical Support	5
3	Safety Information	6
4	Overview	9
5	Installation	10
6	DIP Switch Settings	12
7	Operation and Maintenance	13
	7.1 Troubleshooting	13
8	Calibration	17
9	Specifications	18
10	Approvals and Certifications	20

1 Legal Information

The information provided in this documentation contains general descriptions and/or technical characteristics of the performance of the products contained herein. This documentation is not intended as a substitute for and is not to be used for determining suitability or reliability of these products for specific user applications. It is the duty of any such user or integrator to perform the appropriate and complete risk analysis, evaluation and testing of the products with respect to the relevant specific application or use thereof. Neither Schneider Electric nor any of its affiliates or subsidiaries shall be responsible or liable for misuse of the information contained herein. If you have any suggestions for improvements or amendments or have found errors in this publication, please notify us.

No part of this document may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without express written permission of Schneider Electric.

All pertinent state, regional, and local safety regulations must be observed when installing and using this product. For reasons of safety and to help ensure compliance with documented system data, only the manufacturer should perform repairs to components.

Trademarks

Schneider Electric, ClearSCADA, SCADAPack, Trio, Modbus, and StruxureWare are trademarks and the property of Schneider Electric SE, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

Address

Schneider Electric

415 Legget Drive, Suite 101, Kanata, Ontario K2K 3R1 Canada

Direct Worldwide: +1 (613) 591-1943

Fax: +1 (613) 591-1022

Toll Free within North America: 1 (888) 267-2232

www.schneider-electric.com

© 2014 - 2017 Schneider Electric Canada Inc.

All rights reserved.

2 Technical Support

Questions and requests related to any part of this documentation can be directed to one of the following support centers.

Technical Support: Americas, Europe, Middle East, Asia

Available Monday to Friday 8:00am – 6:30pm Eastern Time

Toll free within North America 1-888-226-6876

Direct Worldwide +1-613-591-1943

Email supportTRSS@schneider-electric.com

Technical Support: Australia

Inside Australia 1300 369 233

Email au.help@schneider-electric.com

3 Safety Information

Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a Danger or Warning safety label indicates that an electrical hazard exists, which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **can result in** death or serious injury.

CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, **can result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Before You Begin

Do not use this product on machinery lacking effective point-of-operation guarding. Lack of effective point-of-operation guarding on a machine can result in serious injury to the operator of that machine.

 WARNING
EQUIPMENT OPERATION HAZARD <ul style="list-style-type: none">• Verify that all installation and set up procedures have been completed.• Before operational tests are performed, remove all blocks or other temporary holding means used for shipment from all component devices.• Remove tools, meters, and debris from equipment. Failure to follow these instructions can result in death or serious injury.

Follow all start-up tests recommended in the equipment documentation. Store all equipment documentation for future reference.

Test all software in both simulated and real environments.

Verify that the completed system is free from all short circuits and grounds, except those grounds installed according to local regulations (according to the National Electrical Code in the U.S.A, for instance). If high-potential voltage testing is necessary, follow recommendations in equipment documentation to help prevent accidental equipment damage.

Operation and Adjustments

The following precautions are from the NEMA Standards Publication ICS 7.1-1995 (English version prevails):

- Regardless of the care exercised in the design and manufacture of equipment or in the selection and ratings of components, there are hazards that can be encountered if such equipment is improperly operated.
- It is sometimes possible to misadjust the equipment and thus produce unsatisfactory or unsafe operation. Always use the manufacturer's instructions as a guide for functional adjustments. Personnel who have access to these adjustments should be familiar with the equipment manufacturer's instructions and the machinery used with the electrical equipment.
- Only those operational adjustments actually required by the operator should be accessible to the operator. Access to other controls should be restricted to help prevent unauthorized changes in operating characteristics.

Acceptable Use

SCADAPack E remote Programmable Automation Controllers (rPACs), Remote Terminal Units (RTUs) and input/output (I/O) modules are intended for use in monitoring and controlling non-critical equipment only. They are not intended for safety-critical applications.

WARNING

UNACCEPTABLE USE

Do not use SCADAPack E rPACs, RTUs, or I/O modules as an integral part of a safety system. These devices are not safety products.

Failure to follow this instruction can result in death or serious injury.

CAUTION

EQUIPMENT OPERATION HAZARD

When devices are used for applications with technical safety requirements, the relevant instructions must be followed.

Use only Schneider Electric software or approved software with Schneider Electric hardware products.

Failure to follow these instructions can result in minor or moderate injury.

4 Overview

The Model 5506 Analog Input Module adds eight analog inputs to the 5000 input/output system. These inputs are used with devices such as pressure, level, flow, and temperature transmitters; instrumentation such as pH and conductivity sensors; and other high-level analog signal sources.

The 5506 input module measures current or voltage inputs in the ranges 0 to 20mA, 4-20mA, 0 to 5 V or 1 to 5 V.

The 5506 module uses a 16-bit analog to digital (A/D) converter. A single chip microcontroller with integral watchdog timer operates the A/D and communicates over the I/O bus.

Inputs have transient protection and are optically isolated from the main logic power. The inputs are single ended. They share a common return.



Figure 1: 5506 Analog Input Module

5 Installation

The installation of the 5506 module requires mounting the modules on the 7.5mm by 35mm DIN rail and connecting the module to the system I/O Bus. Refer to the **System Configuration Guide** for complete information on system layout, I/O Bus cable routing and module installation.

For ATEX and IECEx applications only:

This equipment is to be installed in an enclosure certified for use, providing a degree of protection of IP54 or better. The free internal volume of the enclosure must be dimensioned in order to keep the temperature rating. A T4 rating is acceptable.

Field Wiring

Input Power Connection

Connect an external 11-30V DC power supply to the Power Input terminals. This is to power the isolated analog input circuits. 5V power required for the digital circuitry is available on the I²C bus. Refer to the specifications for details.

In systems where multiple 5000 modules and other devices are connected to the DC power supply, it is possible for noise to be coupled into the DC power supply. For these reasons it is recommended that the negative side of the DC supply be connected to the panel or chassis ground. This connection can be made on the 5000 power supply.

Analog Input Wiring

The 5506 module provides 8 analog inputs for use with 20 mA loop powered transmitters, 20mA self powered transmitters and 5V self powered transmitters. **Figure 2: Typical 5506 Analog Input Field Wiring** shows three examples of how to wire these inputs. These examples are described below.

Example on Analog Input 0: A 20mA loop powered transmitter is connected from a suitable DC power source to the analog input. Analog Input 0 is configured as a 20mA current input.

Example on Analog Input 1: A 20mA self-powered transmitter is powered from an external source. The positive output of the transmitter is connected to the analog input. The negative output of the transmitter is connected to the terminal COM. Analog Input 1 is configured as a current input.

Example on Analog Input 2: A 5V self-powered transmitter is powered from an external source. The positive output of the transmitter is connected to the analog input. The negative output of the transmitter is connected to the terminal COM. Analog Input 2 is configured as a voltage input.

In the **5501 Emulate Mode** inputs are configured as either current or voltage as determined by the mA dip-switch on the 5506 module. Mixing of voltages and currents is not possible when in the 5501 Emulate Mode. Mixing of voltages and currents is possible when the 5506 is used in Native Mode.

This module should be the only loop current measurement device in the loop when using the

analog inputs in the 20mA measurement mode.

If power to the module is removed, the module reverts to voltage mode and in-effect opens the current loop.

When power is restored to the module the analog inputs are set to the state configured by SCADAPack E Configurator. Applications that cannot tolerate this possibility must utilize external current sense resistors with the module input range set to voltage.

The terminal **COM** is common to the analog inputs and is electrically connected to the negative side of the DC power supply that powers the analog input section of the 5506 module.

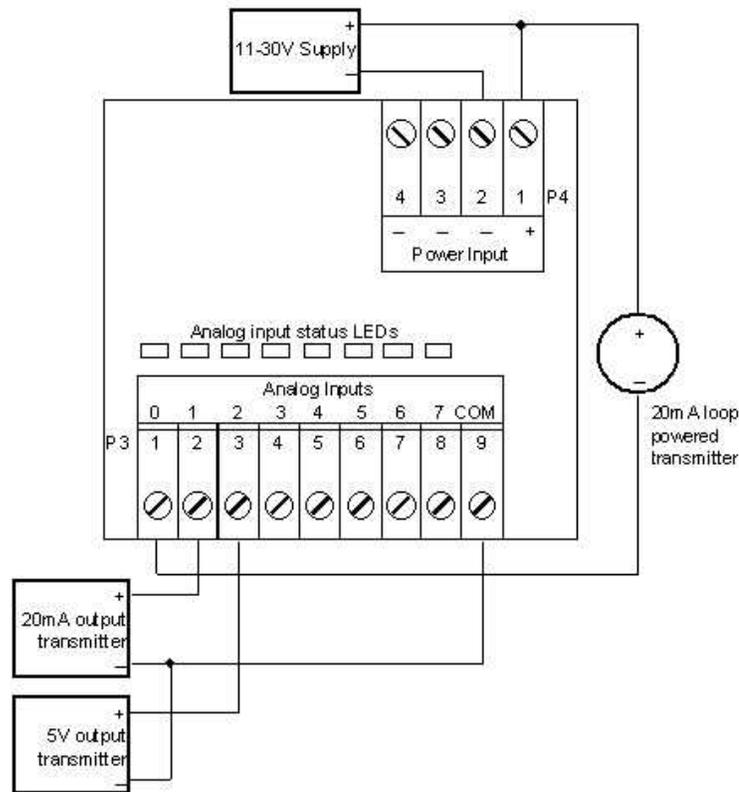


Figure 2: Typical 5506 Analog Input Field Wiring

6 DIP Switch Settings

Address Selection

5000 Series I/O module types may be combined in any manner to the maximum supported by the controller used.


Each type of I/O module, connected to the I/O bus, has a unique I/O module address. Different types of I/O modules may have the same module address.

The address range supported by the SCADAPack controller module may restrict the I/O module address range. Refer to the controller manual for the maximum address supported.

Each analog input module has a unique set of channels. The four address switches labeled 1, 2, 4 and 8 set the module address. To set the address:

- Open the four switches by sliding the actuator to the left side of the switch.
- Slide actuators to the right such that they total the desired address.

Switch settings for each of the 16 module addresses are shown in **Figure 3: 5506 Analog Input Module Address Switches**

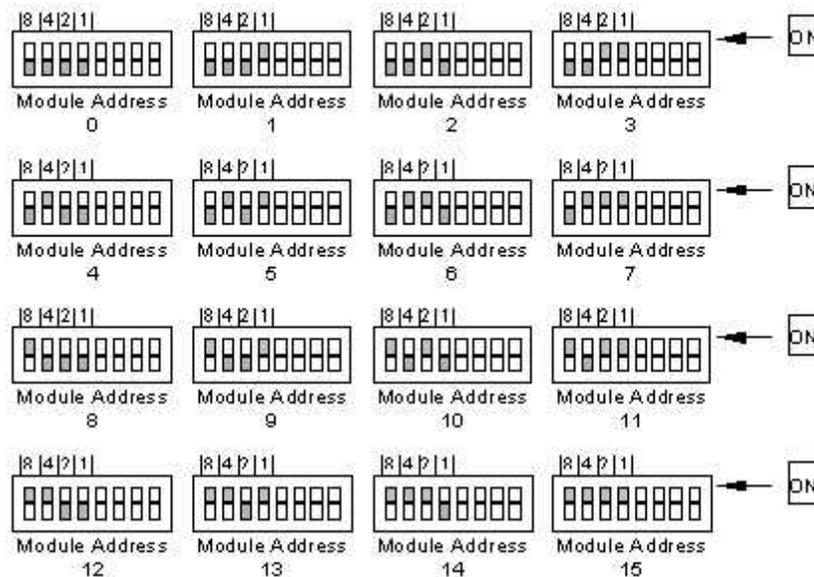

How to Set Address Switches

- Determine the module address.
- Slide actuators (side shown in gray).

Figure 3: 5506 Analog Input Module Address Switches

7 Operation and Maintenance

The 5506 RTD module is configured for use using the SCADAPack E Configurator SCADAPack I/O property page.

- Each input is individually configurable for 0-5V, 1-5V, 0-20mA, or 4-20mA operation.
- Converted analog input data is returned as a signed 15-bit value, providing 8 times more resolution than in 5501 mode. Negative values are possible, for example if a 4-20mA is open loop.
- The module returns status information for each analog input indicating if the analog input is in or out of range for the defined signal type.
- Inputs have a configurable filter rate.
- The input-scanning rate is software configurable to 50 or 60 hertz.

Data Format

The 5506 Analog Input Module uses a 16-bit analog to digital (A/D) converter. The A/D output is scaled to provide output data.

5506 Analog Input configuration includes:

- Each input is configured for 0-20mA, 4-20mA, 0-5V or 1-5V input type
- Analog input filtering is applied for each analog input. Filtering is used to dampen process variations or noise.
- Analog input scan frequency is set for analog inputs. The scan frequency selection improves AC noise rejection at the correct frequency.

0% Input Offset

The 5506 Analog Input module may be set for 0-20mA or 0-5V (0% input offset) input measurement. When set for 0% input offset the input resolution is:

- 0.61uA resolution on 20mA inputs.
- 0.15mV resolution on the 5V inputs.

The table below shows the analog input data for several input signals. The table assumes the **Raw Min.** and **Raw Max.** scaling values for the point are set for 0 and 10000 respectively.

Current	Voltage	Analog Data
0mA	0 V	0
5mA	1.25 V	2500
10mA	2.5 V	5000
15mA	3.75 V	7500
20mA	5V	10000

>20.01mA	>5.0025V	10000
----------	----------	-------

20% Input Offset

The 5506 Analog Input module may be set for 4-20mA or 1-5V (20% input offset) input measurement. When set for 20% input offset the input resolution is:

- 0.49uA resolution on 20mA inputs
- 0.12mV resolution on the 5V inputs

The table below shows the analog input data for several input signals. The table assumes the **Raw Min.** and **Raw Max.** scaling values for the point are set for 0 and 10000 respectively.

Current	Voltage	Analog Data
0mA	0	0
<3.92mA	<0.98V	0
3.92mA	0.98V	0
4mA	1 V	0
8mA	2 V	2500
12mA	3 V	5000
16mA	4 V	7500
20mA	5V	10000
>20.01mA	>5.0025V	10000

5501 Emulation Mode

The 5501 emulation mode is not supported on SCADAPack E controllers. Set the dip-switch for 5506 operation.

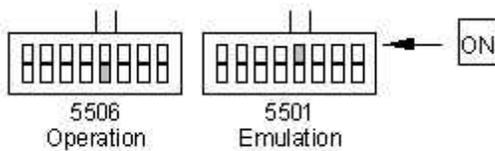


Figure 4: 5501 Emulation

LED Indicators

There are 8 LED's on the 5506 analog input module. The SCADAPack, through the I/O bus, powers the LED's. The LED's can be disabled to conserve power. Refer to the controller manual for more information.

The table below describes the LED's.

LED	Function
AIN Status	On when analog input is configured for current. Off when analog input is configured for voltage. Long flashes when current input is out of range. Short flashes when voltage input is out of range.

Maintenance

This module requires no routine maintenance. If the module is not functioning correctly, contact Schneider Electric Technical Support for more information and instructions for returning the module for repair.

7.1 Troubleshooting

Condition	Action
20mA inputs read 0.	Check transmitter power.
Reading is at or near 0 for input signals.	Check if the input transient suppressers are damaged.
Reading is constant.	Check that the analog input is not forced.
20mA readings are not accurate.	Check for a damaged 250 Ω current sense resistor. Check that the input is configured for 20mA or current inputs.

8 Calibration

The 5506 module is calibrated at the factory. It does not require periodic calibration. Calibration may be necessary if the module has been repaired as a result of damage. Calibration is done electronically at the factory. There are no user calibration procedures.

9 Specifications

Disclaimer: Schneider Electric reserves the right to change product specifications without notice. For more information visit <http://www.schneider-electric.com>.

General

I/O Terminations	12 to 22 AWG 15A contacts Screw termination - 6 lb.-in. (0.68 Nm) torque
Dimensions	2.9 inch (74 mm) wide 4.9 inch (124 mm) high 1.8 inch (45 mm) deep
Packaging	corrosion resistant zinc plated steel with black enamel paint
Environment	5% RH to 95% RH, non-condensing -40°C to 70°C (-40°F to 158°F) operation -40°C to 85°C (-40°F to 185°F) storage
Addressing	16 modules. DIP switch selectable.

Analog Inputs

Quantity	8
Ranges	0-20mA 4-20mA 0-5V 1-5V
LED Indicators	8 red status LEDs indicating, current input, voltage input and under or over range signal applied.
Input configuration	Individual inputs configurable with 4mA/1V (20%) offset and for voltage/current operation when configured as a 5506. Inputs are DIP switch selectable with 4mA/1V (20%) offset and for voltage/current operation when configured to emulate a 5501 module.
Input resistance	250 ohms - Current configuration. 66k ohms - Voltage configuration.
Resolution	15 bits over the 0-5V and 0-20mA measurement range

Type	Single ended
Accuracy	±0.1% of full scale at 25°C (77°F) ±0.2% over temperature range
Transient Protection	2.5kV surge withstand capability as per ANSI/ IEEE C37.90.1-1989
Normal mode rejection at 60Hz with 60Hz scanning	53dB with 3Hz filter 50dB with 6Hz filter 49dB with 11Hz filter 45dB with 30Hz filter
Normal mode rejection at 50Hz with 50Hz scanning	73dB with 3Hz filter 56dB with 6Hz filter 52dB with 11Hz filter 49dB with 30Hz filter
Response Time for 10% to 90% signal change (60Hz scanning)	250ms with 3Hz filter 130ms with 6Hz filter 60ms with 11Hz filter 30ms with 30Hz filter
Response Time for 10% to 90% signal change (50Hz scanning)	300ms with 3Hz filter 140ms with 6Hz filter 80ms with 11Hz filter 40ms with 30Hz filter
Over-scale Input Capacity (without damage)	Continuous: 0.10A/14V on the 20mA inputs. 0.05A/14V on the 5V inputs.
Connector	Removable. 10 positions.
Isolation	500Vac isolation from logic supply and chassis.

Power Supply

5V power requirements	22mA, LEDs off 45mA, LEDs on
11-30Vdc power requirements	UL508 rated 13.75-28Vdc. Class 2 11mA
11-30Vdc - Connector	Removable. 4 positions.
11-30Vdc - Isolation	Isolation from logic supply and chassis

10 Approvals and Certifications

Hazardous Locations - North America	Suitable for use in Class I, Division 2, Groups A, B, C and D Hazardous Locations. Temperature Code T5 CSA certified to the requirements of: <ul style="list-style-type: none"> • CSA Std. C22.2 No. 213-M1987 - Hazardous Locations.. • UL Std. No. 1604 - Hazardous (Classified) Locations.
Hazardous Locations - Europe	ATEX II 3G, Ex nA IIC T4 per EN 60079-15, protection type n (Zone 2)
Hazardous Locations	IECEX, Ex nA IIC T4 per IEC 60079-15, protection type n (Zone 2)
ATEX and IECEx Applications only	This equipment is to be installed in an enclosure certified for use, providing a degree of protection of IP54 or better. The free internal volume of the enclosure must be dimensioned in order to keep the temperature rating. A T4 rating is acceptable. For products using Solid State Relays (5415, 5606 and 5607 modules and SCADAPack using these modules) A T4 rating is acceptable for maximum loads of 1.33 A. When 2 A loads are connected to the Solid State Relays, the maximum ambient rating is lowered to 50 °C (122 °F) in order to maintain the T4 rating.
Safety	CSA (cCSAus) certified to the requirements of: CSA C22.2 No. 142-M1987 and UL916. (Process Control Equipment, Industrial Control Equipment) in Canada and USA. UL (cULus) listed: UL508 (Industrial Control Equipment)
Digital Emissions	FCC 47 CFR Part 15, Subpart B, Class A Verification EN61000-6-4: Electromagnetic Compatibility Generic Emission Standard Part 6-4: Industrial Environment C-Tick compliance. Registration number N15744.
Immunity	EN61000-6-2: Electromagnetic Compatibility Generic Standards Part 6-2: Immunity for Industrial Environments
Declaration	This product conforms to the above Emissions and Immunity Standards and therefore conforms with the requirements of Council Directive 2014/30/EU (as amended) relating to electromagnetic compatibility and is eligible to bear the CE mark. The Low Voltage Directive is not applicable to this product.

Schneider Electric

415 Legget Drive, Suite 101, Kanata, Ontario K2K 3R1 Canada

Direct Worldwide: +1 (613) 591-1943

Fax: +1 (613) 591-1022

Toll Free within North America: 1 (888) 267-2232

www.schneider-electric.com

Copyright © 2014 - 2017 Schneider Electric Canada Inc. All Rights Reserved.